



MAKERS WARRANTY

APPROVED
DESIGN
AUSTRALIAN
GAS
ASSOCIATION

Cannon
FITZROY PROFILE
INBUILT
Power Flue

USER INSTRUCTIONS

INBUILT MODEL
FITZPIBPWR-02-NG
FITZPIBPWR-02-LP

THE HEATER IS APPROVED FOR USE WITH NATURAL AND PROPANE GASES.
PLEASE LEAVE ALL INSTRUCTIONS WITH THE OWNER.

CONTENTS

CONTENTS

WARRANTY 1

SAFETY WARNINGS 2-3

WHAT TO DO IF YOU SMELL GAS
WARNINGS
STANDARDS

USER INSTRUCTIONS 4-6

OPERATING INSTRUCTIONS
CLEANING

HEATER SPECIFICATIONS 7-9

WARRANTY

THE CANNON APPLIANCE IS WARRANTED AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP FOR A PERIOD OF ONE (1) YEAR FROM THE DATE OF ORIGINAL PURCHASE, FOR RESIDENTIAL USE IN AUSTRALIA.

WARRANTY SERVICE, WHICH INCLUDES PARTS AND LABOUR FOR THE REPLACEMENT OR REPAIR OF DEFECTIVE PARTS, IS AVAILABLE THROUGH CANNON AUTHORIZED SERVICE AGENCIES.

CONSUMERS ARE RESPONSIBLE FOR SERVICE PERSON'S TRAVEL OUTSIDE NORMAL SERVICE AREAS (APPROXIMATELY SEVENTY 70K RADIUS FROM THE NEAREST CANNON DEALER'S LOCATION), LOCAL CARTAGE, AND NORMAL MAINTENANCE AS DESCRIBED IN THIS MANUAL.

ANY PRODUCT SUBJECTED TO MISUSE, ABUSE, NEGLIGENCE, ACCIDENT OR ALTERATION WILL HAVE IT'S WARRANTY VOIDED. THE DEFAACEMENT OF SERIAL PLATE WILL HAVE IT'S WARRANTY VOIDED.

IF INSTALLATION IS NOT CARRIED OUT IN ACCORDANCE WITH THE MANUFACTURER'S INSTRUCTIONS, THIS WARRANTY WILL BE VOIDED.

THE CUSTOMER MUST KEEP THEIR "TAX INVOICE" AS PROOF OF PURCHASE OF THIS PRODUCT AND THE COMPLIANCE CERTIFICATE AS PROOF OF REQUIRED INSTALLATION.

MODEL NUMBER:

SERIAL NUMBER:

DATE OF MANUFACTURE:

DATE INSTALLED:

COMPLIANCE CERTIFICATE No:

DESIGNED, MANUFACTURED AND DISTRIBUTED BY:

SAMPFORD AND STAFF PTY LTD
421 SMITH STREET
FITZROY, VIC, 3065
TEL: 1300 727 421

DON'T RISK YOUR APPLIANCE WARRANTY

ONLY A LICENSED PERSON WILL GIVE YOU A COMPLIANCE CERTIFICATE, SHOWING THAT THE WORK COMPLIES WITH ALL THE RELEVANT STANDARDS.

AND ONLY A LICENSED PERSON WILL HAVE INSURANCE PROTECTING THEIR WORKMANSHIP FOR 6 YEARS.

SO MAKE SURE YOU USE A LICENSED PERSON TO INSTALL THIS APPLIANCE AND ASK FOR YOUR COMPLIANCE CERTIFICATE TO ENSURE THE MANUFACTURERS APPLIANCE WARRANTY WILL BE HONoured.

SAFETY WARNINGS

5. NEVER ATTEMPT TO BURN PAPER OR OTHER MATERIAL IN THE HEATER.
6. DO NOT SPRAY AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILE IT IS IN OPERATION.

DO NOT PLACE ARTICLES ON OR AGAINST THIS APPLIANCE.

DO NOT USE OR STORE FLAMMABLE MATERIALS NEAR THIS APPLIANCE.
7. IF REMOVED THE GLASS WINDOW MUST BE PUT BACK ONTO THE UNIT PRIOR TO OPERATING THE HEATER.
8. INSTALLATION AND REPAIRS SHOULD BE PERFORMED BY A LICENSED SERVICE PERSON ONLY, REFER TO BACK OF MANUAL FOR SERVICE NUMBERS.
9. FOR INSTALLATION INTO A COMBUSTIBLE FIREPLACE CONSTRUCTED FROM TIMBER OR PLASTERBOARD, THE FLUE WILL NEED TO BE SUPPORTED TO MAINTAIN CLEARANCES FROM COMBUSTIBLE MATERIALS.

NOTE: WHEN INSTALLING INTO A MOCK FIREPLACE A MOCK FIREPLACE INSTALLATION KIT MUST BE USED.

10. THE HEATER MUST BE INSTALLED WITH IT'S INTEGRAL FLUE CORRECTLY INSTALLED FOR THIS HEATER TO OPERATE PROPERLY, IF NOT CORRECTLY INSTALLED AND MAINTAINED VENTING SYSTEM CAN RESULT IN CARBON MONOXIDE (CO) POISONING AND POSSIBLE DEATH.
11. THE APPLIANCE SHOULD BE INSPECTED PRIOR TO USE, WITH REGULAR INSPECTIONS (ANNUALLY) TO BE MADE BY A LICENSED SERVICE PERSON. IT IS IMPORTANT THAT CIRCULATING AIR PASSAGEWAYS OF THE APPLIANCE BE KEPT CLEAN, DIRT AND LINT FREE, FOR A SAFE AND EFFICIENT OPERATION OF THE HEATER.
12. ON THE FIRST LIGHTING YOUR HEATER A SMELL MAY OCCUR DUE TO IT'S NEW CONDITION. THIS IS NORMAL AND WILL DISAPPEAR AFTER A FEW HOURS OF USE AT MAXIMUM CONTROL POSITION.

**IMPORTANT.
WHEN THIS HEATER IS OPERATING, THE MESH GUARD IS HOT.**

THE MESH GUARD FITTED TO THE HEATER CONFORMS TO AUSTRALIAN STANDARDS.
FOR PERMENANT PROTECTION OF YOUNG CHILDREN OR THE INFIRM A SECONDARY GUARD SHOULD BE PLACED AROUND THE HEATER.
A SECONDARY GUARD IS NOT PROVIDED WITH THIS HEATER AND MAY BE PURCHASED BY THE OWNER.

STANDARDS.

THIS APPLIANCE MEETS THE FOLLOWING STANDARDS:

STANDARDS AUSTRALIA. AS 3100
AS 5601
AS 4553 / AG 103

SAFETY WARNINGS

PLEASE READ THIS MANUAL BEFORE USING THIS HEATER.

WHAT TO DO IF YOU SMELL GAS.

1. **TURN OFF THE MAIN GAS SUPPLY.**
2. EXTINGUISH ANY OPEN FLAME.
3. OPEN WINDOWS.
4. DO NOT TOUCH ELECTRICAL SWITCHES.
5. DO NOT USE YOUR TELEPHONE.
6. CALL YOUR GAS SUPPLIER IMMEDIATELY FROM YOUR NEIGHBOUR'S PHONE.

WARNINGS.

1. IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE INJURY OR PROPERTY DAMAGE. REFER TO OTHER SECTIONS OF THIS MANUAL FOR CORRECT PROCEDURES, OR CONSULT WITH PLACE OF PURCHASE, A LICENSED PLUMBER, A GAS SUPPLIER OR SERVICE AGENT.
2. DUE TO HIGH TEMPERATURES, THE ROOM HEATER SHOULD BE LOCATED OUT OF TRAFFIC AND AWAY FROM:
 - FURNITURE.
 - COMBUSTIBLE MATERIALS.
 - GASOLINE AND OTHER FLAMMABLE LIQUIDS.

DO NOT PLACE CLOTHING OR OTHER FLAMMABLE MATERIAL ON OR NEAR THE HEATER.

3. KEEP CURTAINS *, CLOTHING, FURNITURE AND OTHER FLAMMABLE MATERIALS AT LEAST 900mm FROM THE FRONT AND SIDES OF THE HEATER.

* AT THE OWNER'S DISCRETION CURTAIN CLEARANCES CAN BE LESS THAN 900mm AS LONG AS THEY ARE RESTRAINED FROM THE FRONT, TOP AND SIDES OF THE HEATER. THE MANUFACTURER TAKES NO RESPONSIBILITY IF CURTAIN CLEARANCE IS LESS THAN 900mm AND NOT RESTRAINED.

4. CHILDREN AND ADULTS SHOULD BE ALERTED TO THE HAZARDS OF HIGH SURFACE TEMPERATURE AND SHOULD TAKE CARE TO AVOID BURNS OR CLOTHING IGNITION.

THIS HEATER IS NOT INTENDED FOR USE BY YOUNG CHILDREN OR INFIRM PERSONS WITHOUT SUPERVISION.

YOUNG CHILDREN SHOULD BE CAREFULLY SUPERVISED WHEN THEY ARE IN THE SAME ROOM AS THE HEATER.


YOUNG CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE HEATER.

USER INSTRUCTIONS

OPERATING INSTRUCTIONS.

1. PLUG THE POWER CORD INTO THE WALL SOCKET AND TURN ON THE POWER TO THE HEATER, **SEE FIG 1.** REFRAIN FROM USING AN EXTENSION CORD.

 FIG 1.

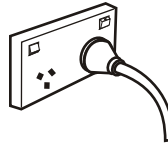

2. FOR CONTROL LAYOUT REFER TO **FIG 2.**


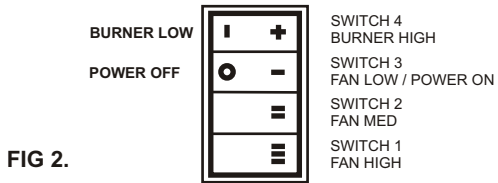 


FIG 2.


3. TO TURN HEATER ON PRESS SWITCH TO **POWER ON** POSITION. THERE IS A 30 SECOND DELAY BEFORE THE BURNER IGNITES. THIS DELAY IS TO ALLOW THE IGNITION SEQUENCE TO TAKE EFFECT. AT THIS SETTING THE BURNER IS ON **LOW**. THE BURNER WILL IGNITE ON BOTH **HIGH AND LOW** SETTINGS. REFER **FIG 3.**

 FIG 3.

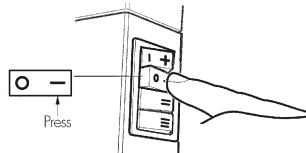


4. TO TURN BURNER TO **HIGH** SETTING, PRESS SWITCH FOR **HIGH** SETTING. REFER **FIG 4.**

 FIG 4.

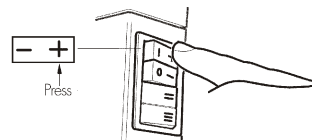

5. TO INCREASE THE FAN SPEED TO **MED**, PRESS SWITCH FOR **MED** SETTING. REFER **FIG 5.**

 FIG 5.

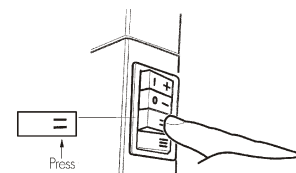

USER INSTRUCTIONS

OPERATING INSTRUCTIONS. 6. TO INCREASE THE FAN SPEED TO **HIGH**, PRESS SWITCH FOR **HIGH** SETTING. REFER FIGURE 6.

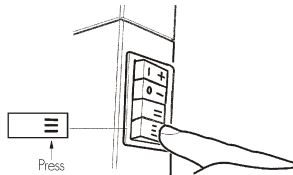 


FIG 6.

7. TO TURN THE BURNER TO **LOW** SETTING, PRESS SWITCH FOR **LOW** SETTING. REFER FIGURE 7.

ON **LOW** BURNER SETTING IT IS MORE EFFICIENT TO OPERATE THE FAN SPEED ON LOW.

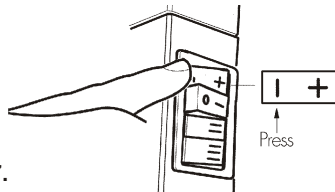 


FIG 7.

8. IF THE BURNER FAILS TO IGNITE, WAIT 20 SECONDS AND REPEAT THE IGNITION PROCEDURE. REFER FIGURE 7.

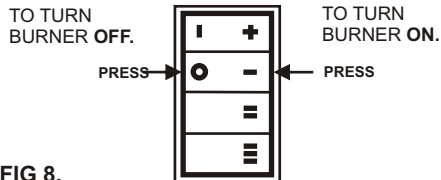 


FIG 8.

NOTE:

IF YOU TURN THE HEATER OFF, WAIT 10 MINUTES BEFORE YOU TURN THE HEATER BACK ON AGAIN. THIS WILL ALLOW THE SWITCH WHICH CONTROLS THE IGNITION TIME TO RESET.

DO NOT USE THIS HEATER IF THE GLASS IS CRACKED OR WITH THE GLASS REMOVED.

DO NOT USE HEATER WITH BROKEN OR MISSING LOGS.

THE HEATER FLAME SHOULD BE STABLE, NO LIFTING FROM THE BURNER AND THE LOGS SHOULD GLOW AFTER APPROXIMATELY 15 MINUTES OPERATION ON HIGH SETTING.

THE HEATER IS A FUEL EFFECT UNIT AND IS DESIGNED TO OPERATE WITH LUMINOUS FLAMES AND MAY EXHIBIT SLIGHT CARBON DEPOSIT ON THE LOGS. IF ANY EXCESS CARBON BUILD UP ON LOGS OR THE BURNER FLAME IS UNSTABLE, CONTACT SAMPFORD AND STAFF IN YOUR STATE. (SEE PHONE CONTACT PAGE 9.)

USER INSTRUCTIONS

CLEANING

ALL CLEANING SHOULD BE CARRIED OUT WHEN THE HEATER IS COLD. NORMALLY THE HEATER SHOULD ONLY NEED WIPING WITH A LINT FREE DAMP CLOTH. ANY STUBBORN STAINS CAN BE REMOVED WITH A NON-ABRASIVE SPRAY ON CLEANER. IF AN ABRASIVE CLEANER IS USED THE PAINT FINISH WILL BE DAMAGED.

INTERNALLY THE HEATER SHOULD ONLY BE CLEANED BY A LICENSED SERVICE PERSON LISTED IN THIS MANUAL.

IF YOUR HEATER REQUIRES ATTENTION CONTACT YOUR SUPPLIER OR LICENSED SERVICE PERSON LISTED IN THIS MANUAL.

HEATER SPECIFICATIONS

IMPORTANT.

THE APPLIANCE SHOULD BE INSPECTED BEFORE USE AND AT LEAST ANNUALLY BY AN AUTHORISED SERVICE PERSON. MORE FREQUENT CLEANING MAY BE REQUIRED DUE TO EXCESS LINT BUILD UP FROM CARPETING, BEDDING MATERIALS, PET HAIR, ETC.

IT IS IMPERATIVE THAT CONTROL COMPARTMENTS, BURNERS AND CIRCULATING AIR PASSAGE WAYS OF THE APPLIANCE BE KEPT CLEAN.

DO NOT USE THIS FIRE IF THE GLASS IS CRACKED OR WITH THE GLASS SAFETY SCREEN REMOVED.

DO NOT USE FIRE WITH BROKEN OR MISSING LOGS.

SPECIFICATIONS

GAS TYPE :	NATURAL GAS & PROPANE GAS
GAS CONSUMPTION :	28 MJ/hr NG / 27 MJ/hr PROPANE
ENERGY STAR RATING :	4.4
ENERGY OUTPUT :	23.4 MJ/hr
HEATER TYPE :	HEATER APPROVED TO AS 4553 / AG 103
OPERATING PRESSURE :	NATURAL GAS 1.0 kPa PROPANE GAS 2.65 kPa
GAS REGULATOR :	INTEGRAL WITH CONTROLLER (NG)
MIN INLET PRESSURE :	NATURAL GAS 1.13 kPa PROPANE GAS 2.75 kPa
FAN :	THREE SPEED
CONTROLLER :	ELECTRONIC
MIN CAVITY DIMENSIONS : (FOR INSTALLATION INTO A MASONRY/BRICK FIREPLACE)	HEIGHT = 610 WIDTH = 710 DEPTH = 385
POWER REQUIREMENTS :	240 VAC 10 AMP
OPTIONAL ACCESSORIES :	CONSULT SUPPLIER
OVERALL DIMENSIONS :	REFER FIG 9.

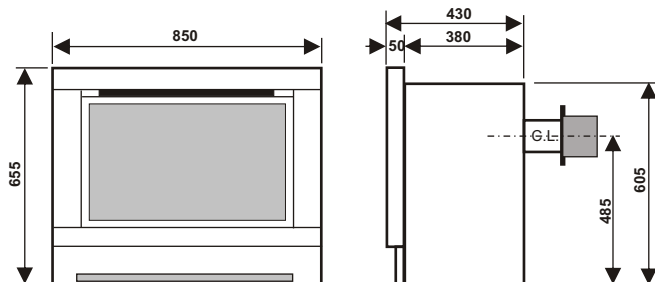 


FIG 9.

NOTES

NOTES



FOR SERVICE TO THIS APPLIANCE CONTACT.
 52-70 Sparks Avenue
 Fairfield Vic. 3078

Phone: 1300 727 421
 Fax: 1300 727 425
 Email: service@sampford IXL.com.au

CANNON FITZROY PROFILE PWR SERIES 2		2007
DATE OF MANUFACTURE		HGC (MJ) 28.0
SERIAL NUMBER		AGA APPROVAL # 6809
INJECTORS SIZE	NATURAL 0.72 x 7 x 2	ELECTRICAL ACCEPT IN
	PROPANE 1.10 x 2	COMPLIANCE WITH AS3100
GAS TYPE NATURAL PROPANE		ELECTRICAL 240VAC 0.5A 50Hz
TEST POINT PRESSURE 1.00 kPa NATURAL		Designed, manufactured, and distributed by:
2.65 kPa PROPANE		SAMPFORD & STAFF
F3016 REV C		TELEPHONE 1300 727 421